



## **QUICK START GUIDE FOR BONDING TWO LOGITEMP® CONTROLLERS**

Before following the steps in this guide, please make sure that the evaporator and condenser have been connected to power and copper piping has been connected according to UL standards. If you are using a KE2 Edge Manager to connect the evaporator and condenser by wifi, please consult the LogiTemp® Electronic Controller System Operations Manual for instructions.

1. Run an ethernet/LAN cable from the evaporator controller to the condenser controller
2. Enter the advanced setpoints menu on the Logitemp® controller by holding back until ES is displayed
3. Press up or down until bnd is displayed
4. Press and hold enter until the red LED starts blinking
5. Wait several seconds
  - If PAS appears on the three-digit display, then the controllers bonded correctly
  - If FAi appears on the display, then the controllers did not bond correctly
6. If the controllers did not bond correctly then you should ensure that the cable is connected properly and try bonding them again
7. To access the basic setpoints menu press and hold enter until ES is displayed.
8. To access the advanced setpoints menu press and hold back until ES is displayed.
9. To activate manual defrost press and hold ENTER and ↓.
10. To activate manual valve control press and hold BACK and ↓.
11. To clear an alarm manually, press and hold BACK until tS appears, press ↑ several times to CLA (Clear Alarm), press and hold BACK until the red LED blinks, then release.
12. To change the room temperature setpoint, you must first enter the basic setpoints menu. After this, push ↑ or ↓ until ts is displayed and push enter. Now, ↑ or ↓ will change the value of the setpoint.

For further operating instructions, scan the code below to access the LogiTemp® Electronic Controller System Operations Manual.

